

Atlas 10

operating instructions

**UPLIFTING
SOLUTIONS**



Atlas 10

operating instructions

UPLIFTING
SOLUTIONS 



A – Backrest tilt

Adjust the angle of the backrest in relation to the seat-pan. Pull lever up to adjust, push lever down to lock.

B – Seat pan tilt

Adjust the angle of the seat pan. Pull lever up to adjust, push lever down to lock.

C – Seat pan height

Adjust the height of the seat pan. Pull lever up with weight on chair to reduce height, remove weight from chair and pull lever up to raise height.

D – Armrests (optional)

Adjust the height and width of the armrests. **D¹** raise the knob to adjust the armrests up and down. Lower knob to fix height of armrests. **D²** turn dial anti-clockwise to adjust width of armrest, turn dial clockwise to fix armrest in place.

E – Backrest height

Adjust the height of the backrest. Turn dial anti-clockwise to adjust the height of the backrest. Turn dial clockwise to fix the height if the backrest.